
## Snap Tees DWV Inspection Tees

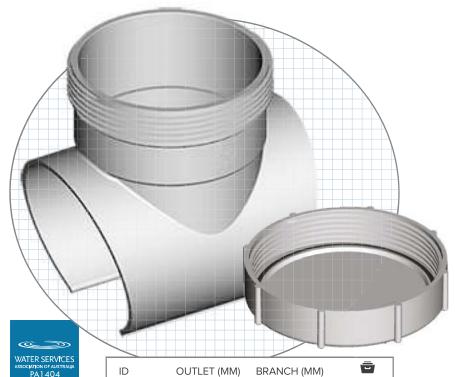

- 19372 Snap Tee only
- 19616 Includes Threaded Screw Cap (19372 Snap Tee + 15001 Threaded Screw Cap)
- Plastec recommends using 102mm Hole Saw for drilling pipe
- Ideal to be used on cast iron stacks as a repair/inspection point
- Solvent weld to the host pipe

19372

WaterMark AS/NZS1260 239 19616 (+cap) 100



100

100

100

24

23

